



Nikon Coolpix L840 LCD Screen Replacement

LCD screen is Broken or Malfunctioning? Here is a replacement guide.

Written By: Abraham Lozano



INTRODUCTION

This guide outlines the steps required to replace the LCD screen. Some parts can be delicate, so care is required when handling this replacement.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — LCD Screen



- Extend the screen by grasping the screen and pulling it out.

Step 2



- Unscrew the four black, 4mm Phillip #000 screws on the corners of the back case of the screen.
- Unscrew the two black, 2mm Phillips #000 screws on the case of the hinge. (The hinge connects the screen to the body of the camera.)

Step 3



- Remove the top-half case of the hinge by lifting it off.
- Remove the bottom-half case of the hinge by lifting it off.

Step 4



- Pry the back case off of the screen with a metal spludger by slipping the spludger in between the front and back halves of the screen's case and wiggling the spludger forwards and backwards.

Step 5



- The front cover comes off easily once the back cover is removed in Step 4.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 09:18:20 PM.